

 
Warning To be installed by qualified electrician. Power must when work is done. Failure to do so will cause permanent Arichilume constant current power supply only. damage and will void warranty. Class 2 connection only. Use 00


> Archilume AL Series (W Installation

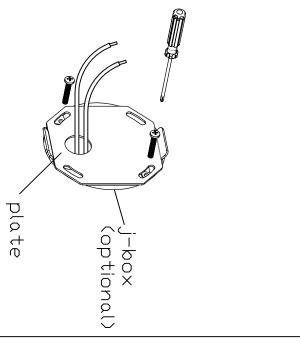

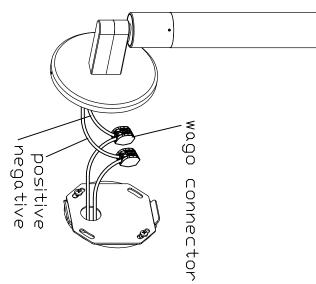



Connect positive to negative from next lamp(s) & driver with wago connectors provided to complete series connection. Refer to wiring diagram for complete wiring instruction

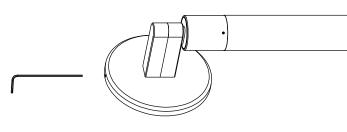

Push electrical connections into J-box and secure fixture to mounting plate with (2) set screws.