





LEE BROOM

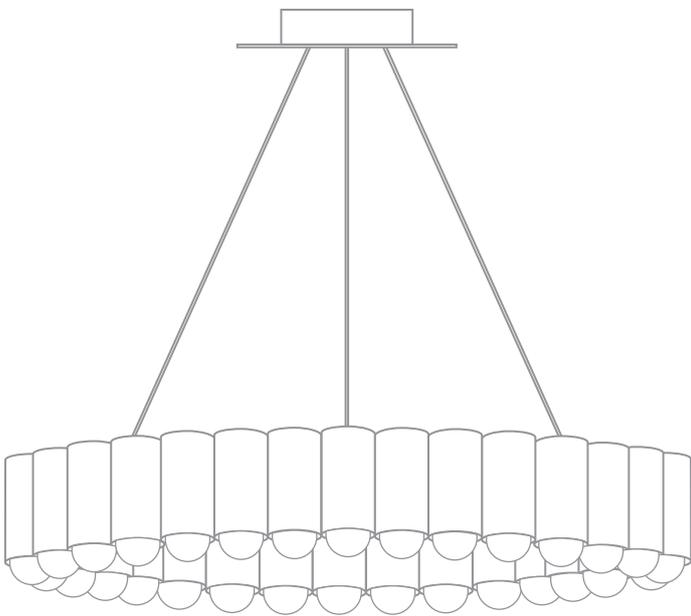

CAROUSEL LIGHT

CONTENTS

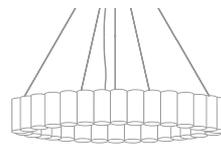

1X
CAROUSEL
LIGHT



1 X
CEILING
PLATE



2X
CEILING
PLATE
SCREWS



30X
E26 LED
BULBS

ATTENTION

- The carousel light must be installed by a professional, qualified electrician
- Minimum of two people required for installation
- Ensure power supply is disconnected prior to installation.
- This product is for interior use only and should be installed in a dry environment only.
- Please use a universal leading edge dimmer switch which is suitable for low wattage LEDs
- Caution heavy product approx. weight 8kg
- LED bulbs are supplied



135W TOTAL
MAXIMUM
WATTAGE

THIS
PRODUCT
MUST BE
EARTHED

110/130V
50-60 HZ

E26
LAMP
HOLDER

Care and Cleaning

- Only attempt to clean when the Carousel Light is switched off.
- Only use a non-abrasive, soft, dry cloth when cleaning the Carousel Light.


LEE BROOM

Lee Broom, Electra House, 93 Rivington St, London, EC2A 3AY
Tel + 44 (0)207 820 0742 info@leebroom.com www.leebroom.com


ASSEMBLY - MUST BE INSTALLED BY A PROFESSIONAL, QUALIFIED ELECTRICIAN

1. Unscrew the x2 screws from the side of the ceiling plate .
2. Separate the ceiling rose top plate from the base plate.
3. Terminate connection wires at suitable junction box or BESA box.
4. Feed mains wire through the central hole of the top plate of the ceiling rose.
5. Fit top plate to ceiling. Its recommended that the plate is fitted directly into a ceiling joist. Different ceilings require different types of fixings, always choose screws and raw plugs that are appropriate for the surface material.
6. Loosen x5 tension cable locking nuts on ceiling rose.
7. Thread tension cable through ceiling rose until you have all five tension cables set to approximately the desired length. (max length 3m)
8. Adjust power wire length by loosening cable grip. Tighten back up once power cable is at desired length.
9. Lift Carousel Light up to ceiling to check you have the correct drop (min. x2 person). Only minor adjustments can be made once the light is fully installed.
10. Once the correct drop has been achieved cut excess tension cable or gather together to hide inside the ceiling rose.
11. Connect the terminated mains wires to the Carousel Light junction box, ensuring wires are correctly connected and the Carousel light is earthed.
12. Align the screw holes on the side ceiling rose with the side holes on the top plate. Once in position use screws to fix into position.
13. Make final small adjustments to tension cable lengths. Once Carousel Light is level screw tension cable nuts tight.
14. Fit E26 LED Bulbs to Carousel Light.
15. To change the light bulbs ensure the power to the Carousel Light is switched off.
16. 2 watt LEDs are provided with Carousel light (total wattage 60watt).
17. Recommended max wattage bulb 4.5 watt LED (total 135watt)


1, 2.

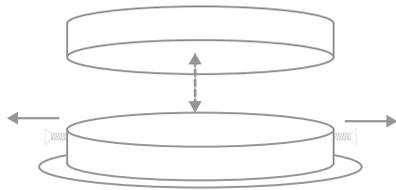


5.

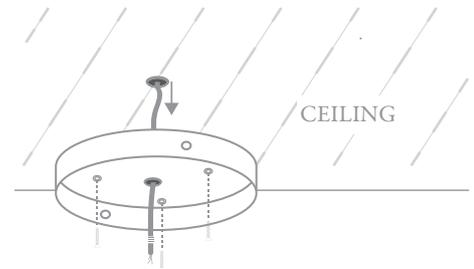


6,7.

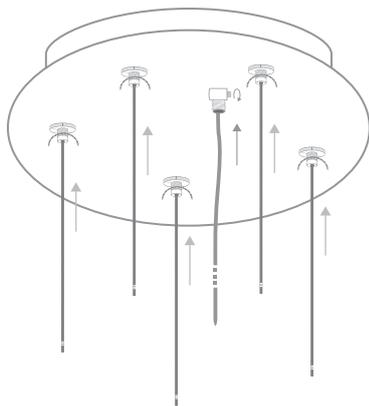

10.

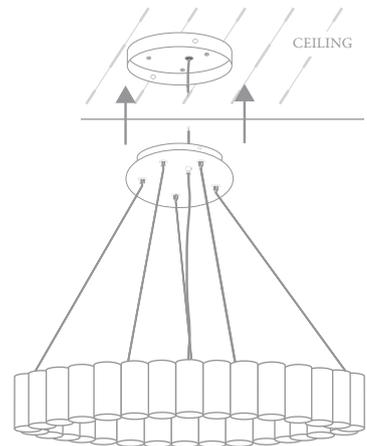

11.

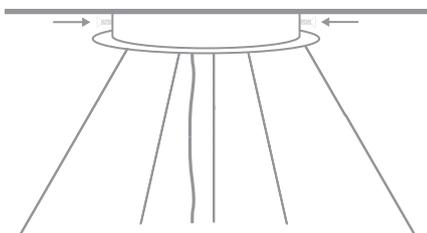

13.

