
v1.2-11.18

US-FT448 / FT449 / FT450 / FT451


Instruction Manual

Cosmo Table Light

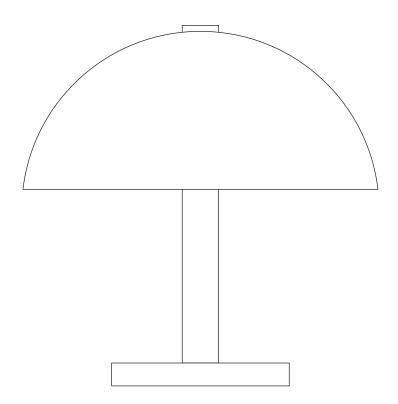

Established in 1990, Original BTC manufactures relaxed, familiar lighting for traditional and contemporary homes.

All products are hand-assembled in Oxford from high quality components, produced in the UK.

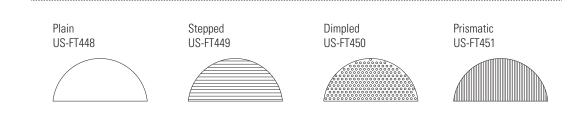







Cosmo Table Light

120V ac 60Hz | IP20 |

Assembly

US-FT448	Plain
US-FT449	Stepped
US-FT450	Dimpled
US-FT451	Prismatic

The Cosmo collection includes pendant and table lights with a shortened, semisphere shade. Available in ribbed prismatic glass or bone china with either a plain, dimpled or stepped finish, the textural shades take on a new dimension when lit, creating beautiful shadows.

LAMP GUIDANCE Cosmo Table Light						
BASE	SHAPE	TYPE*		WATTAGE**		
				FT448/FT449/FT450	FT451	
	\bigcirc	INCANDESCENT	\checkmark	40W MAX	60W MAX	
5		CFL	\checkmark	11W	13W	
E12	A BALL	ECO-HALOGEN	×	n/a	n/a	
EIZ	A DALL	LED	\checkmark	7W	9W	

* Warm white (2700k) low energy lamps recommended.

** Wattage value provided as a guide to suitable lamps. Lower wattage than stated may be used.

- ENG WARNING RISK OF FIRE AND ELECTRIC SHOCK.
- SUITABLE FOR DRY LOCATIONS ONLY
- FR ATTENTION RISQUE D'INCENDIE, RISQUE DE CHOC. POUR EMPLACEMENTS SECS SEULEMENT


Safety Instructions

These instructions are provided for your safety in order to prevent the risk of Fire, Electric shock or Injury. Please retain for future reference. When fitting is in operation, some parts will become hot; take care when using/handling.

- Ensure the lamp type and max wattage is followed- do not exceed. Take care not to overtighten lamp.
- Do not touch the lamp (bulb) or lamp holder while in operation, as both become very hot.
- Turn off and unplug fitting, leaving lamp to cool before changing lamp. Dispose of old lamps carefully.
- Adjust light fitting only when power to the fitting is off and has been left to cool.
- Never leave a fitting without a lamp in position.
- Keep light fitting away from combustible materials such as soft furnishings.
- Ensure children do not play with the light fitting.
- Ensure the light is positioned on a solid, level and non-slip surface and make sure the position of the cable does not pose a trip hazard.
- If the electrical flex or electrical components become damaged at any point, the fitting must be unplugged from the power supply immediately and not operated until the damaged parts are fixed/replaced.
- For use in a dry, indoor environment only. Ensure the fitting does not come into contact with any liquids.

Cleaning and Maintenance

Metal finishes should only be cleaned with a soft, dry cloth. Do not use polishes or abrasives. Bone china can be cleaned by hand, using a soft damp cloth with a diluted mild detergent (nonabrasive) if necessary. Switch off power to the fitting before cleaning.

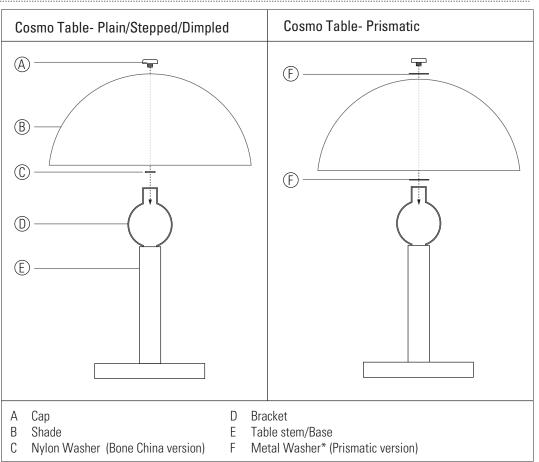

Cosmo Table- Plain/Stepped/Dimpled

- Place the nylon washer (C) on top of the bracket (D), then place the shade on to the washer/bracket, so that the top hole lines up centrally with the washer and bracket.
- Hold the shade in position, before placing the thread of the cap (A) through the hole of the shade and washer, before screwing firmly into top of bracket to secure the shade in place. Do not overtighten cap.

Cosmo Table- Prismatic

- Place one metal washer (F) on top of the bracket (D), then place the shade on to the washer/bracket, so that top hole lines up centrally with both the washer and bracket.
- Hold the shade in position, then place the second metal washer on top of the shade before placing the thread of the cap (A) through the hole of the shade and washer, before screwing firmly into top of bracket to secure the shade in place. Do not overtighten cap.