



1

Twist ends of the cable, this will ensure the coax can fit through the hole drilled in the pendant.

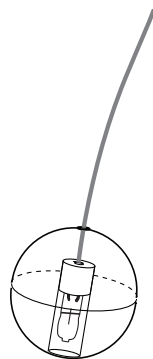

2


Thread the cable through the hole drilled in the pendant.

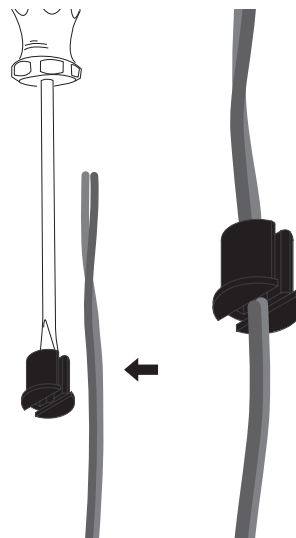

3


Attach the strain relief with collar facing down.

Open up the slot on the strain relief with a flat head screwdriver and push the cable through.

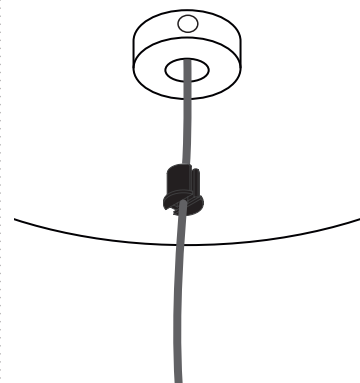

4

Thread the coaxial cable through the canopy until you have reached your desired drop length.

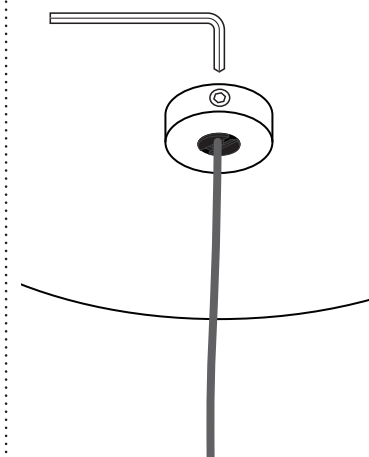

5

Use Allen key to tighten the setscrew to hold the strain relief and secure the coaxial cable at its new length. Perform a gentle tug test to ensure it is secure.

DO NOT OVERTIGHTEN.

For additional assistance, please contact Bocci:

Vancouver
sales@bocci.ca
www.bocci.ca

Berlin
europe@bocci.ca
www.bocci.ca

US Patent # D556, 361
EU Patent # 000518394-0001

Made in Vancouver, Canada



LOW VOLTAGE LUMINAIRE
E476186

RE-THREADING STRAIN RELIEF

14

Design by Omer Arbel
PRODUCT INSTALLATION INSTRUCTIONS

© 2018, Bocci Design and Manufacturing Inc. All rights reserved. Any inquiries should be directed to: info@bocci.ca

BOCCI