

J. James

# Cé Instructions

Wall use only.  
Installation should be made by an electrician.  
Disposable cotton gloves included.

- Tools:
- Metal anchors and screws
  - Screwdriver
  - Wire connectors x2


Do not touch polished bronze surface with your bare hands or it will oxidize. Use the cotton gloves provided with the fixture.




To get rid of eventual oxidation use soft metal polish and a rag to clean the bronze.

- 1** Make sure to wear the gloves at all time during installation and that the circuit breaker is shut down.


Place appropriate anchor and screw 1.7 inch above the electrical box. The screw must be 1/8 inch out of the wall.

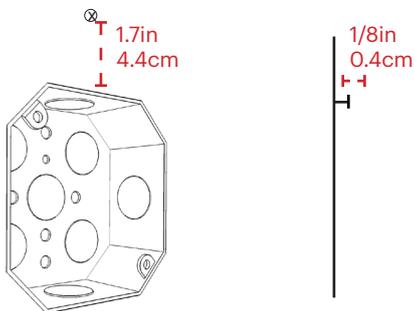

- 2** Connect the ground wire to the screw at the back of the lam first. Then connect the wires with the wire connectors.

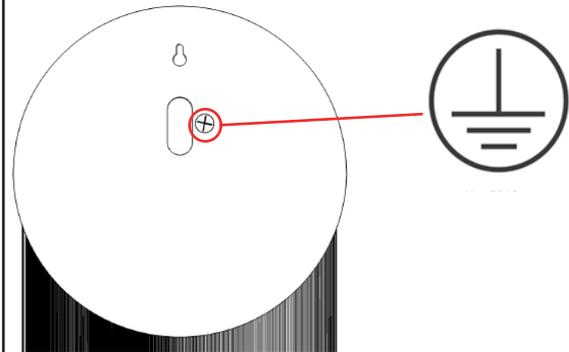

- 3** Once connected, mount the lamp on the wall by sliding the head of the screw in the aperture situated above the wires.

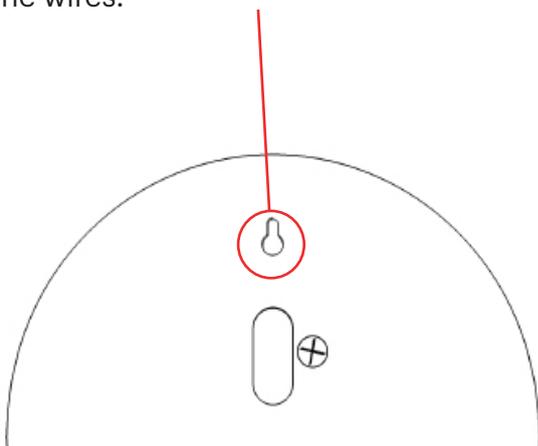

- 4** Secure the lamp by making sure the screw is locked in the upper part of the aperture.

