



CONTENTS

Moonrise Sconce 02 Body

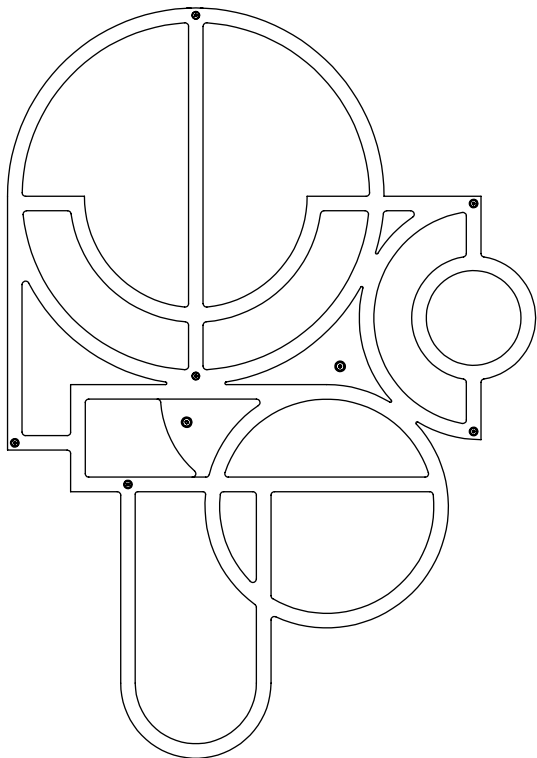

Crossbar/wallplate

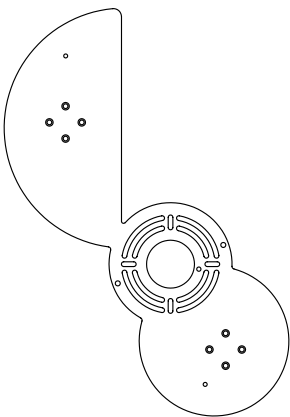

#8-32 Crossbar Screws (2)




#4-40 5/16in Screws (2)



Ground Screw



Terminal Ring and Ground wire



Wire Connectors (3)



SAFETY INFORMATION

Only suitable for direct mounting on non-combustible surfaces.  
Under no circumstances can Moonrise Sconce be mounted on normally flammable surfaces.  
Suitable for dry and damp locations, indoor use only.  
Maximum ambient temperature: 25°C

## Moonrise Sconce 02 | INSTALLATION

*Note: Please contact a licensed electrician for installation. Ensure power is off during installation.*

01. Detach the crossbar/wallplate (A) from the back of the fixture (B) and secure onto the junction box (C) using provided #8-32 screws (D).
02. Ground the crossbar/wallplate (A) using the provided wago connector (E) with a terminal ring and green ground screw. Make sure to pull out the lead wires through the center hole in crossbar.
03. Rotate the cleats (F) and the mating cleats (G) (back of the fixture) to the desired position for vertical or horizontal fixture mounting.
04. Carefully hold fixture (B) to crossbar/wallplate (A) and make the lead wire connections with the provided wago connectors (H). Push all wires back through center hole of crossbar/wallplate (A) into junction box (C).
05. Fit the light fixture (B) back over the crossbar/wallplate (A) using the cleats and secure it in place with the two #4-40 5/16in provided screws (I).

