



CONTENTS


Apollo Assembly




Stems



Glass

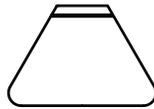

Crossbars

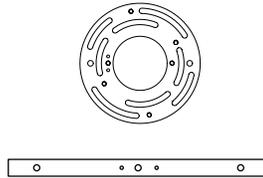


(x4) 8-32 Screw



(x4) 8-32 Nuts



Canopy & Liner

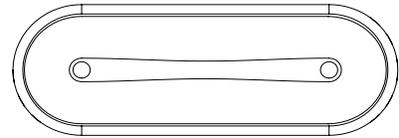

(x2) 1/8 IP Threaded Rod



(x4) Wago Connector 2



(x2) lock Washer



SAFETY INFORMATION

Suitable for damp locations


Maximum ambient temperature: 25°C

CAUTION RISK OF FIRE – MAX 3W TYPE G4 LED self ballasted UL1993/CSAC22.2 no. 1993

APOLLO | INSTALLATION

Note: Please contact a licensed electrician.


1. Use two of the 8-32 screws (A) and tighten onto the universal crossbar (B) using two 8-32 nuts (C) on the other side as shown below.

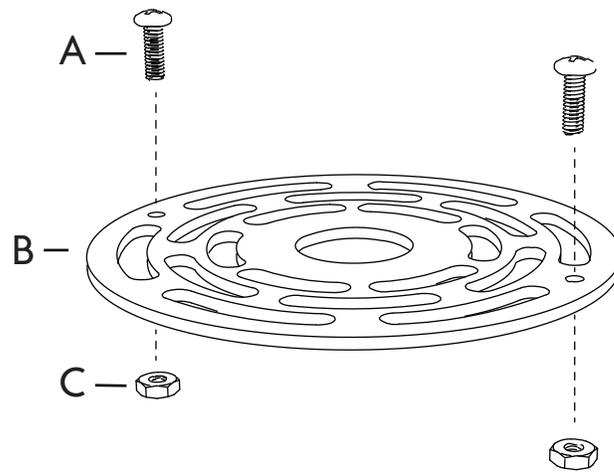

2. Align the crossbar assembly with the existing screws facing down, in the orientation you wish the chandelier to align with (arrows).

Ground the crossbar, and connect the driver as required. Carefully secure it within the junction box.


Secure the crossbar assembly to the junction box with the remaining 8-32 screws, lock washers (D), and nuts.

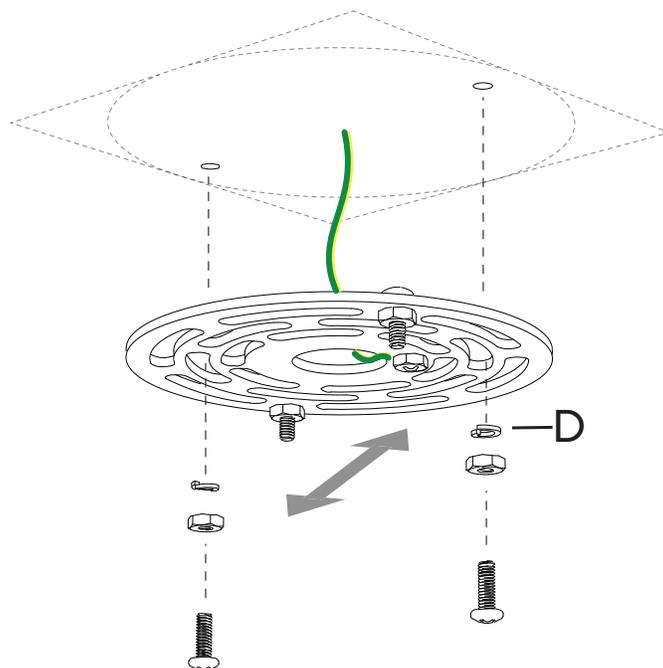

APOLLO | INSTALLATION

3. Feed the wire (E) through one of the stems (F). Secure both stems onto the chandelier assembly by tightening onto the threaded rods (G).


Carefully maneuver the threaded collars (H) on the the hardware at the top of the stems so they slip downward onto the stems. Then carefully place the wooden canopy and metal liner (I) through the stems and down so it can rest. Be careful not to scratch the finish.

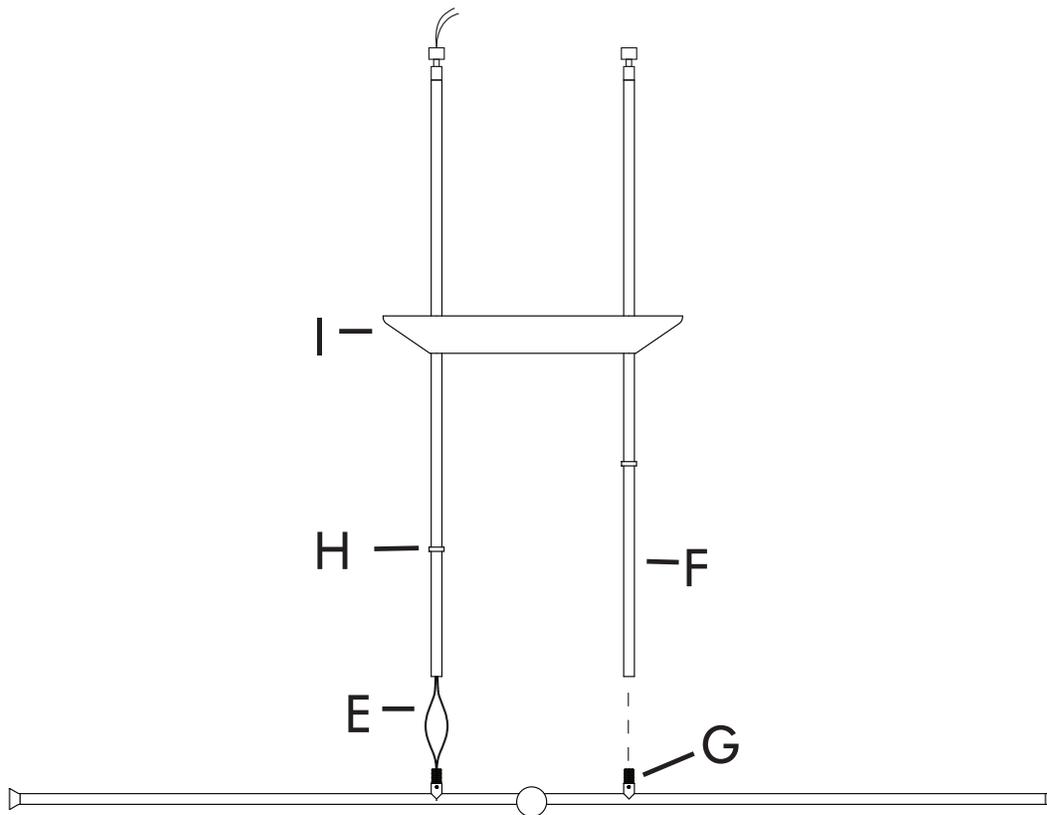

APOLLO | INSTALLATION

4. Take the mounting bracket (J) and screw on the two threaded rods (K) as shown below. Keep about a quarter of an inch exposed on one side of the bracket. Feed wire through one of the rods.


Connect the threaded rods to the hangstraights (L) at the top of the stems. Thread the rods onto the hangstraights in unison. The threaded rods should now be flush at the top of the mounting bracket and secured to the stems evenly.

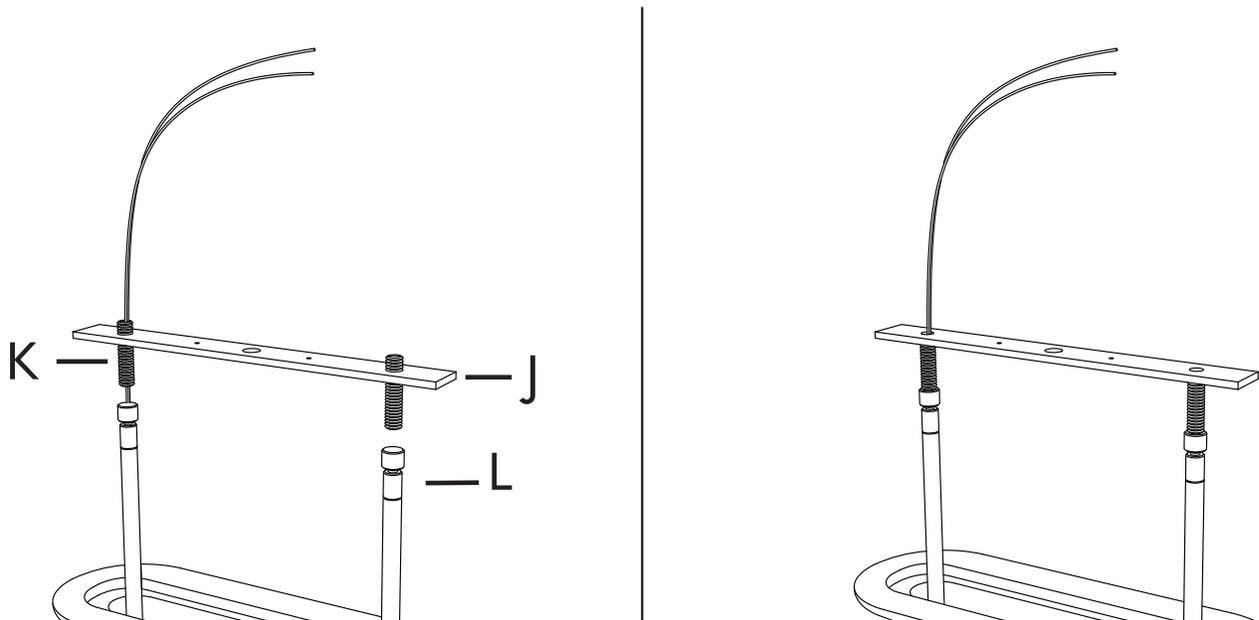


APOLLO | INSTALLATION

5. Secure the entire chandelier to the crossbar using the remaining nuts and lockwashers (M).

Once secure, make the connections from the driver to the wires (E).

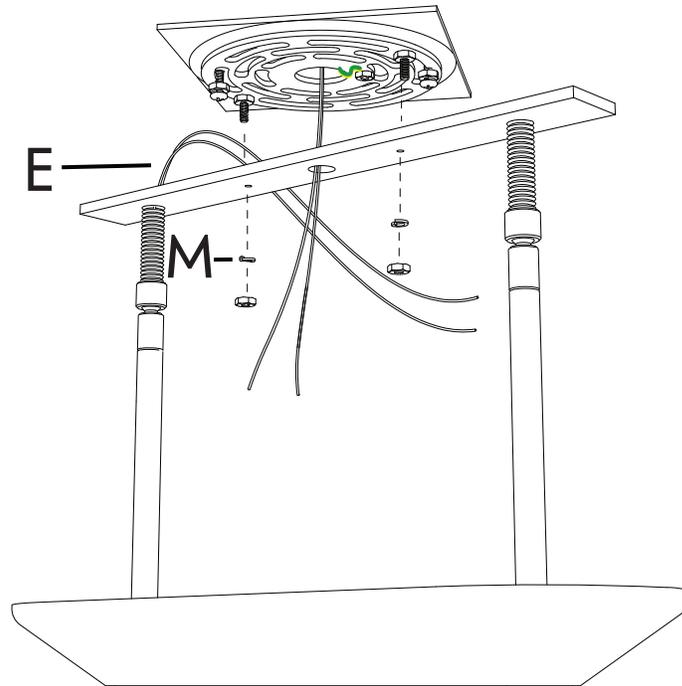

6. Once properly wired, nestle the wires comfortably into the interior liner of junction box. Raise and secure the canopy (I) with the threaded collars (H), threading them on until the canopy is flush with the ceiling.

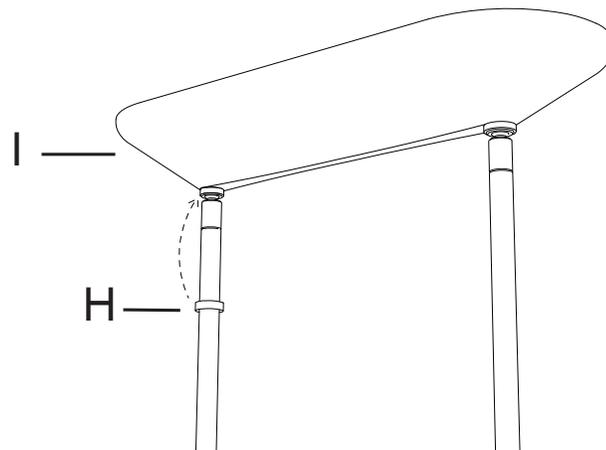

APOLLO | INSTALLATION

7. Add the bulbs (N) and glass diffusers (O). Insert the two prongs of the LED bulbs to the socket (P) as shown below, then carefully thread the glass in place.

