




LEE BROOM

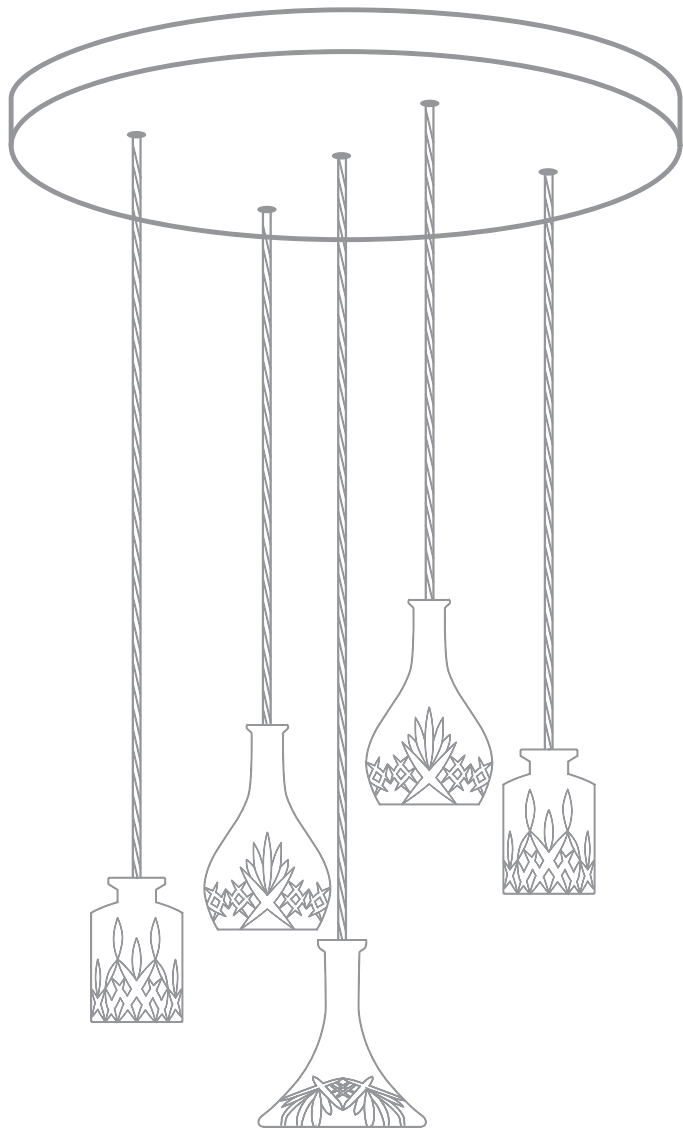

DECANTER CHANDELIER

CONTENTS



1X
ALLEN
KEY



12X
CEILING
SCREWS



3X
PLATE
SCREWS



5X
CORD
GRIP



5X
CORD
GRIP NUT




5X
JUNCTION
BOX



1X
CONNECTOR
BLOCK



5X
PENDANT
FITTING

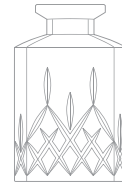


2X
SQUARE
DECANTER




2X
BELL
DECANTER



1X
TULIP
DECANTER



1X
CHANDELIER
BASE PLATE



1X
CHANDELIER
TOP PLATE

ATTENTION

- THE DECANTER CHANDELIER MUST BE INSTALLED BY A PROFESSIONAL, QUALIFIED ELECTRICIAN.
- MINIMUM OF TWO PEOPLE REQUIRED FOR INSTALLATION.
- ENSURE POWER SUPPLY IS DISCONNECTED PRIOR TO INSTALLATION.
- THIS PRODUCT IS FOR INTERIOR USE ONLY AND SHOULD BE INSTALLED IN A DRY ENVIRONMENT.
- PLEASE USE A TRAILING EDGE DIMMER SWITCH WHICH IS SUITABLE FOR THE WATTAGE OUTPUT.
- WHEN SWITCHED ON THE CRYSTAL MAY BECOME HOT.
- CAUTION HEAVY PRODUCT APPROX. WEIGHT 10KG.
- BULBS ARE NOT SUPPLIED.



200W TOTAL
MAXIMUM
WATTAGE
(5 X 40W)

THIS
PRODUCT
MUST BE
EARTHED


220/240V
50-60 HZ

E27
LAMP
HOLDER


CARE AND CLEANING

- ONLY ATTEMPT TO CLEAN WHEN THE DECANTER CHANDELIER IS SWITCHED OFF
- PLEASE ALLOW A SUITABLE COOLING PERIOD BEFORE ATTEMPTING TO CLEAN THE DECANTER CHANDELIER OR REPLACING THE LIGHT BULB.
- ONLY USE A NON-ABRASIVE, SOFT, DRY, CLOTH WHEN CLEANING THE CRYSTAL.


1.

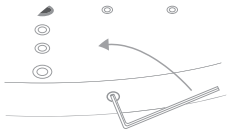


2.

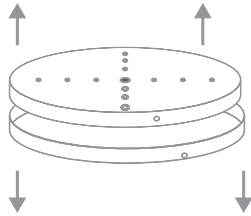


3.

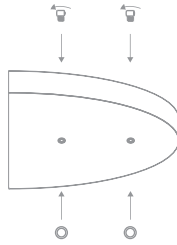


4.

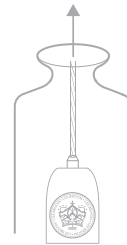


5.

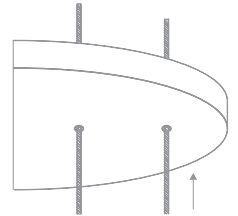


6.

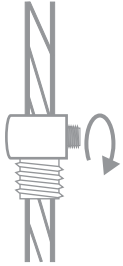


8.

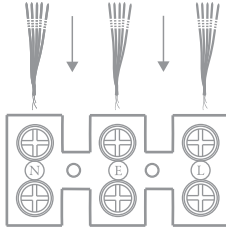


9.

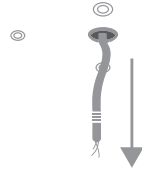


10.

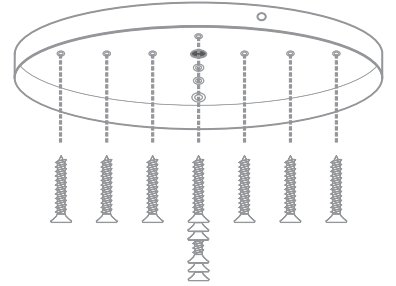


12.

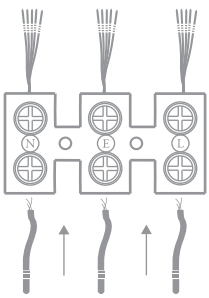

11.

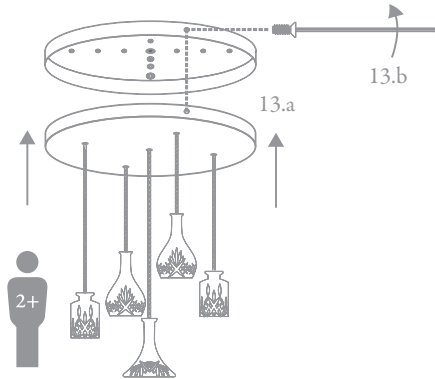

14.

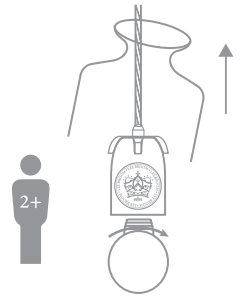

ASSEMBLY - MUST BE INSTALLED BY A PROFESSIONAL, QUALIFIED ELECTRICIAN

1. UNSCREW THE X3 SCREWS FROM THE SIDE OF THE CEILING PLATE USING THE PROVIDED ALLEN KEY.
2. SEPARATE THE CHANDELIER BASE PLATE FROM THE TOP PLATE.
3. SCREW CORD GRIPS INTO THE FIVE HOLES ON THE INSIDE OF THE BASE PLATE. FIX INTO POSITION BY SCREWING THE CORD GRIP NUTS TO THE UNDERSIDE OF THE BASE PLATE.
4. FEED PENDANT CABLES THROUGH DECANTER SHADES.
5. SET PENDANT LENGTHS BY THREADING CABLE THROUGH CORD GRIPS ON CEILING PLATE.
6. SECURE PENDANT LENGTHS BY LOCKING THE CABLE GRIPS.
7. TERMINATE MAINS CONNECTION WIRES AT SUITABLE JUNCTION BOX OR BESA BOX.
8. CONNECT ALL DECANTER PENDANT LIVE, NEUTRAL, AND EARTH WIRES INTO THE SUITABLE POINTS IN THE CONNECTOR BLOCK.
9. FEED MAINS WIRE THROUGH THE CENTRAL HOLE OF THE TOP PLATE.
10. FIT TOP PLATE TO CEILING. IT IS RECOMMENDED THAT THE PLATE IS FITTED DIRECTLY INTO A CEILING JOIST. DIFFERENT CEILINGS REQUIRE DIFFERENT TYPES OF FITTINGS ALWAYS CHOOSE SCREWS AND RAW PLUGS THAT ARE APPROPRIATE FOR THE SURFACE MATERIAL.
11. LIFT THE BOTTOM PLATE WITH THE DECANTER SHADES ATTACHED TO THE TOP PLATE. (THIS REQUIRES X2 PEOPLE)
12. CONNECT THE TERMINATED MAINS WIRES TO CONNECTOR BLOCK. ONCE ALL WIRES ARE CONNECTED FIT CONNECTOR BLOCK INSIDE THE JUNCTION BOX.
13. ALIGN THE SCREW HOLES ON THE SIDE OF THE BOTTOM PLATE WITH THE SIDE HOLES ON THE TOP PLATE. ONCE IN POSITION USE ALLEN KEY SCREWS TO FIX.
14. FIT AN E27 CLEAR GOLF BALL LIGHT BULB IN LAMP HOLDER (40W MAX) TO EACH DECANTER SHADE. (THIS REQUIRES TWO PEOPLE).
15. TO CHANGE THE LIGHT BULBS ENSURE THE POWER TO THE DECANTER CHANDELIER IS SWITCHED OFF. SLIDE THE DECANTER SHADE UP THE WIRE TO ACCESS THE LAMP HOLDER. (THIS REQUIRES TWO PEOPLE).