
CONTENTS

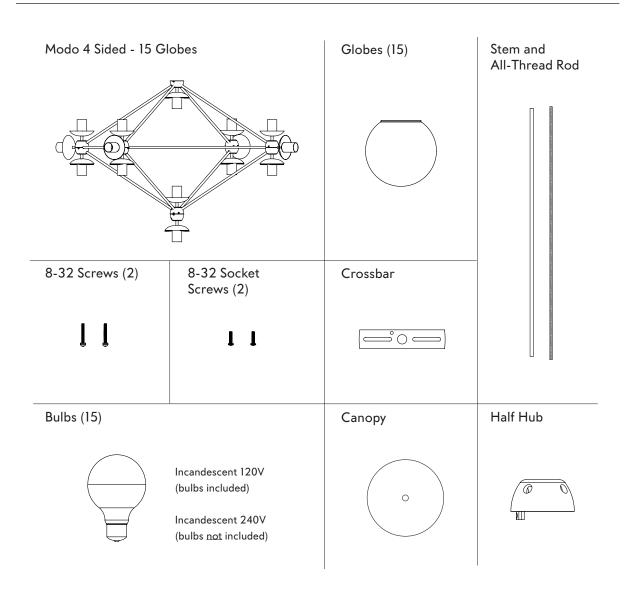

SAFETY INFORMATION

Only one light bulb per socket.

Only suitable for direct mounting on non-combustible surfaces.

Under no circumstances can Modo Chandeliers be mounted on normally flammable surfaces.

Suitable for dry, indoor use only.

Maximum ambient temperatures: 25° C

Roll & Hill


MODO CEILING INSTALLATION

Note: Please contact a licensed electrician. Note: Do not use bulbs that exceed 60 watts.

1. To customize the length of the provided 36-inch stem, cut cover tube to desired length. Then cut the inner threaded tube so that it remains 1/2" longer than the cover tube.



- 2. Install the crossbar (A) using #8-32 screws to junction box (B) in ceiling.
- 3. Attach the green ground wire to the crossbar with ground screw (C).
- 4. Once the crossbar is secure, screw the threaded inner tube (D) a quarter inch into the center hole. Feed the wires from the bottom of the threaded tube into the junction box, strip wires, and make electrical connections.
- 5. Conceal wires and connections inside junction box.

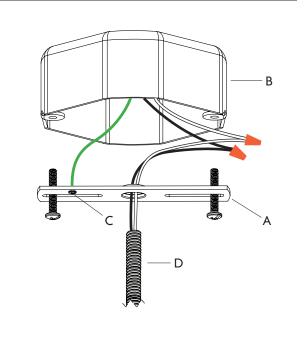


Roll & Hill


MODO CEILING INSTALLATION continued

- 6. Slide the canopy (E) up the threaded tube to the ceiling, followed by the cover tube (F).
- 7. Screw the half hub (G) onto the bottom of the all-thread rod. This will tighten the canopy flush to the ceiling.
- 8. Carefully lift the fixture so that the two half-hubs align. Cut excess wire, strip ends, and make electrical connections between the stem and the fixture (H). Tuck wire nuts and wires inside the hub and close.

Note: This step requires two people.

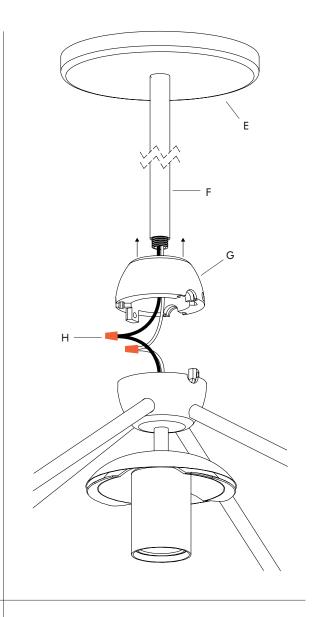


9. Secure the two half hubs together using a hex key and the provided #8-32 socket screws on either side.

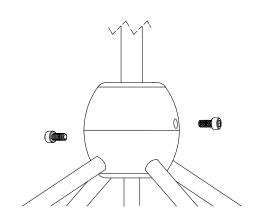

2 GLOBE MODO SCONCE INSTALLATION

Note: Please contact a licensed electrician. Note: Do not use bulbs that exceed 60 watts.


- 1. Attach custom crossbar (A) from the back of the fixture onto the juntion box using provided #8-32 screws (B). Level the crossbar so that two of the holes are horizontal. Pull electrical wires out through the crossbar.
- 2. Trim excess wire and make electrical connections from junction box to sconce (C). Push the connected wires back through the center hole of the crossbar.
- 3. Fit the fixture over the crossbar and secure in place with provided 8-32 screws into the crossbar (D).

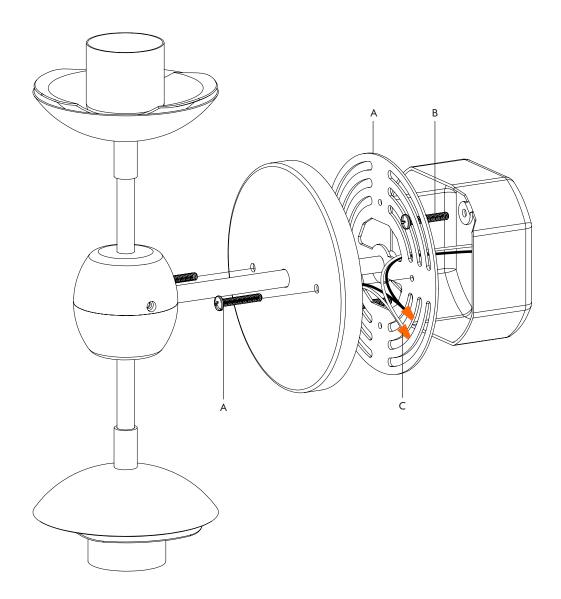

3 GLOBE MODO SCONCE INSTALLATION

Note: Please contact a licensed electrician. Note: Do not use bulbs that exceed 60 watts.

- 1. Attach the crossbar (A) from the back of the fixture onto the juntion box using provided #8-32 screws (B). Screw the 1/8 IPS nipple (C) into the center hole of the crossbar and feed electrical wires out from the nipple.
- 2. Place backplate (D) over nipple and secure by threading the mounting bracket (E) onto the nipple. Tighten until canopy is flush against the wall and mounting bracket is positioned horizontally.
- 2. Hold fixture up to backplate and make electrical connections to sconce, trimming excess wire. Push the connected wires into the half hub.
- 3. Fit the hub over the mounting bracket and secure in place with provided #8-32 socket screws (F) and allen key.

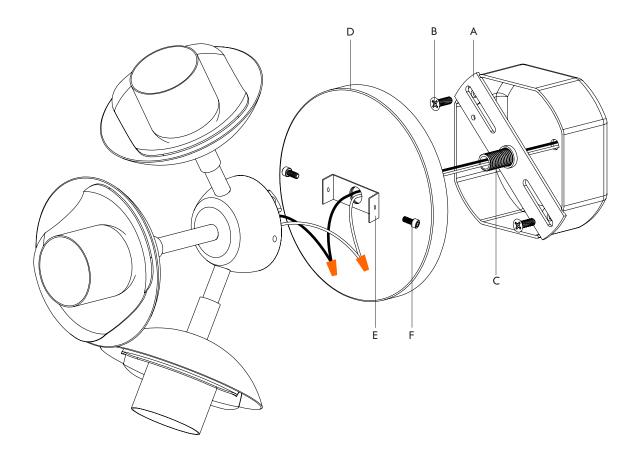

BULB INSTALLATION AND ATTACHING THE GLOBES

Note: Make sure to power off fixture before changing bulbs.

1. Screw light bulbs into sockets. Sandwich the glass globe (A) around the socket fitter (B) and cap (C). Gently tighten the sleeve (D) to hold the globe in place.

